HOME
DECORATORS
COLLECTION

BF-24799 COLLAPSIBLE CRAFT TABLE

INV#07950

ASSEMBLY INSTRUCTIONS

Made In China

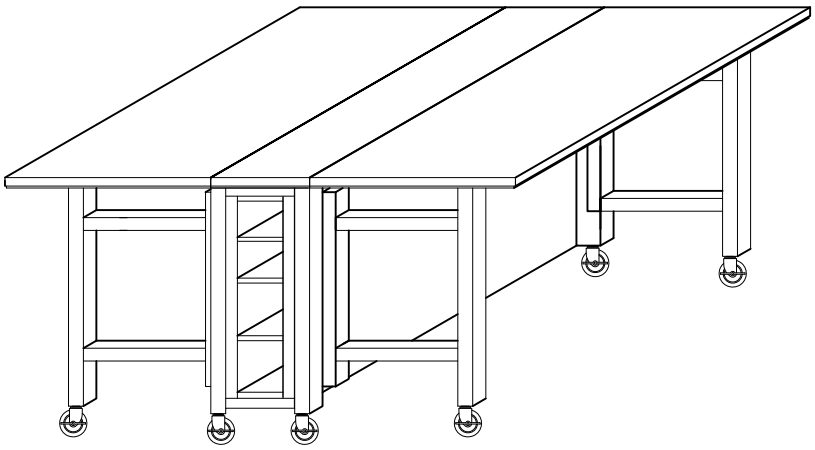

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 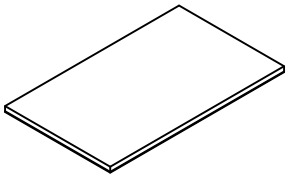 EXTEND PANELS-2PCS	B 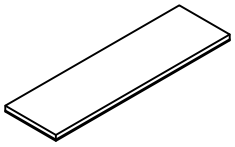 TOP PANEL-1PC	C 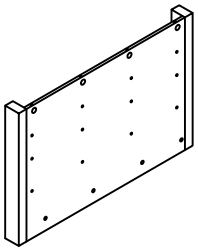 SIDE PANELS-2PCS
D  LEFT FRAMES-2PCS	E  RIGHT FRAMES-2PCS	F 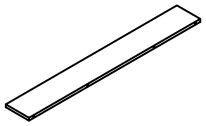 ACROSS PANELS-2PCS
G 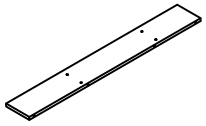 DOWN ACROSS PANEL-1PC	H 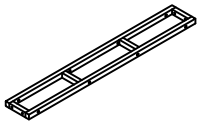 BOTTOM PANEL-1PC	I  UP PANELS-2PCS
J  DOWN PANELS-2PCS	K  PANELS-4PCS	L  HINGES-8PCS

M CAM-TOOL-1PC	N CAM-LOCKS-32PCS	O  CAM-BOLTS-32PCS
P 11mm× 1" SCREWS-8PCS	Q  ALLEN WRENCH-1PC	R CASTERS-8PCS
S 8mm× 1"  SCREWS-16PCS	T  HINGES-8PCS	U 6mm× 3/4" SCREWS-88PCS
V  SPANNER-1PC		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

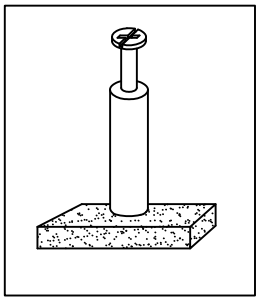

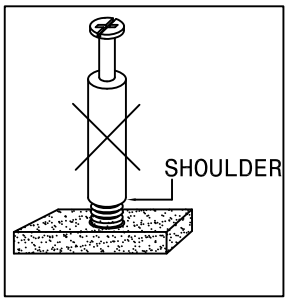

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

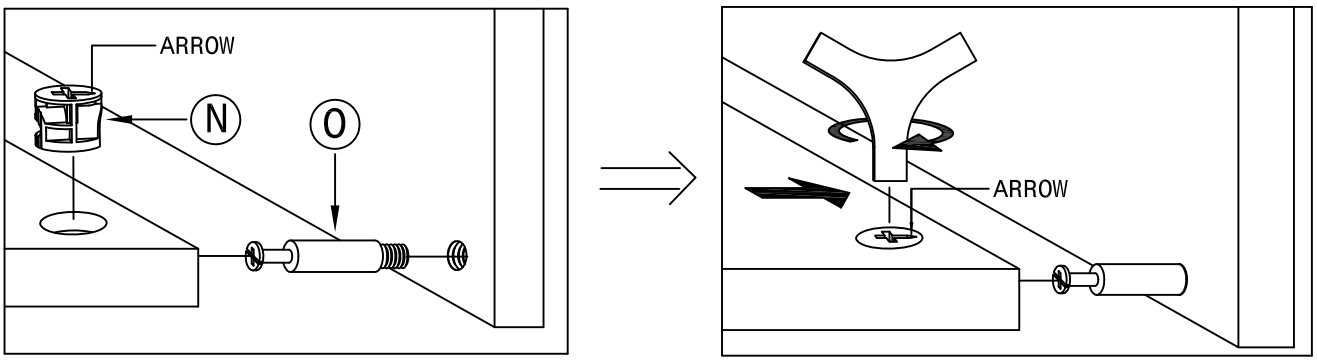

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

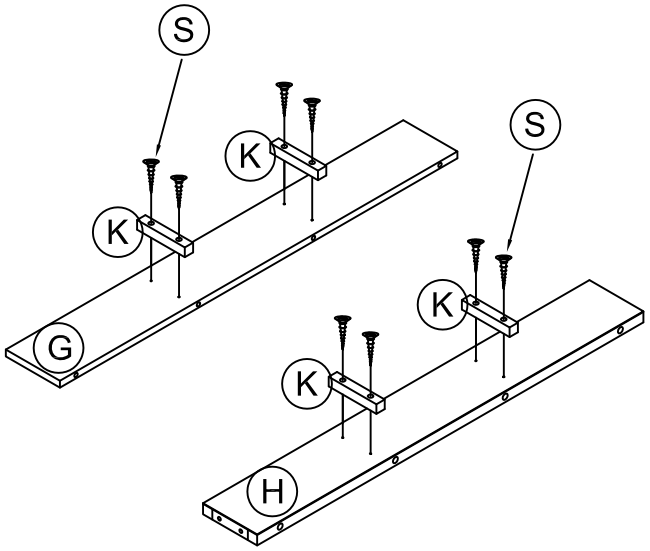

1). ASSEMBLE THE DOWN ACROSS PANEL(G) AND BOTTOM PANEL(H).

- ATTACHT 4 PANELS(K) TO DOWN ACROSS PANEL(G) AND BOTTOM PANEL(H) USING 8 SCREWS(S).

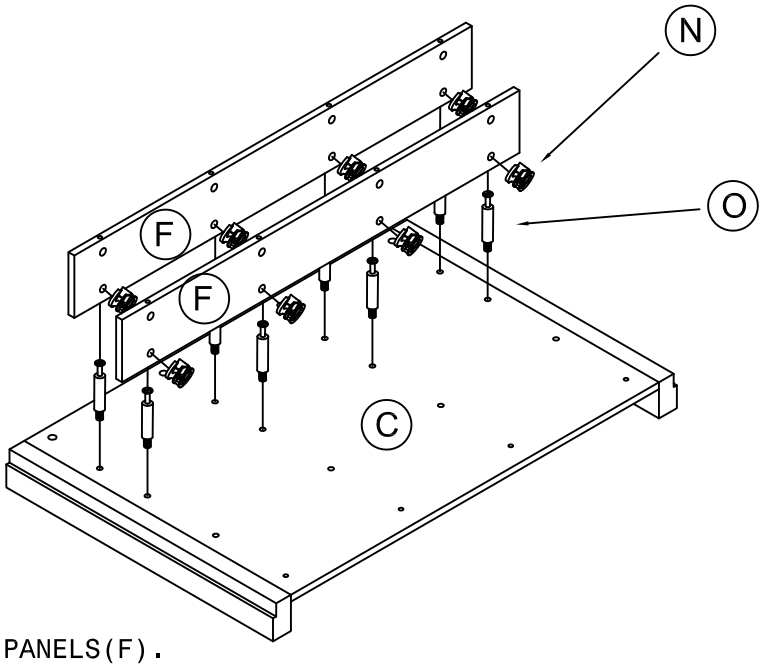

2). ASSEMBLE THE ACROSS PANELS(F).

- ROTATE THE 8 CAM-BOLTS(O) INTO THE HOLES IN THE SIDE PANEL(C).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE ACROSS PANELS(F)AND ATTACH USING 8 CAM-LOCKS(N).

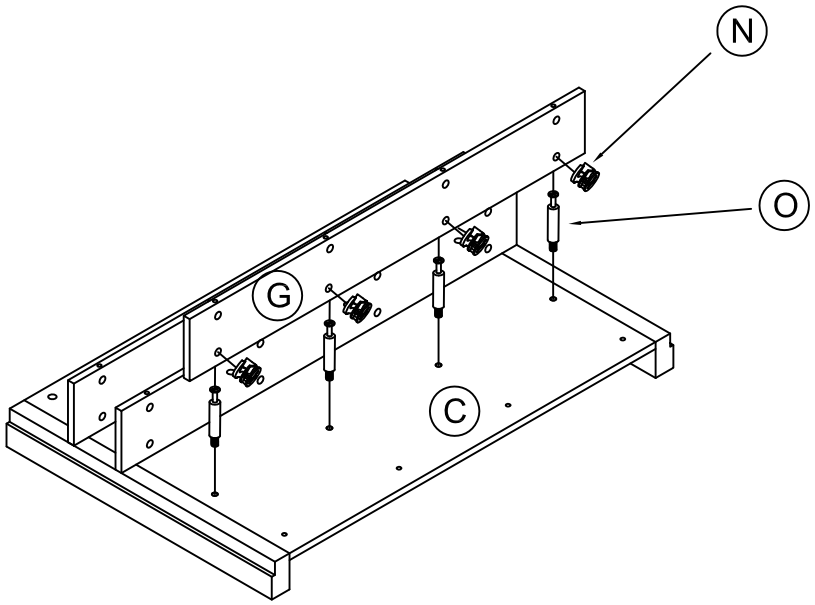

3). ASSEMBLE THE DOWN ACROSS PANEL(G).

- ROTATE THE 4 CAM-BOLTS(O) INTO THE HOLES IN THE SIDE PANEL(C).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE DOWN ACROSS PANEL(G) AND ATTACH USING 4 CAM-LOCKS(N).

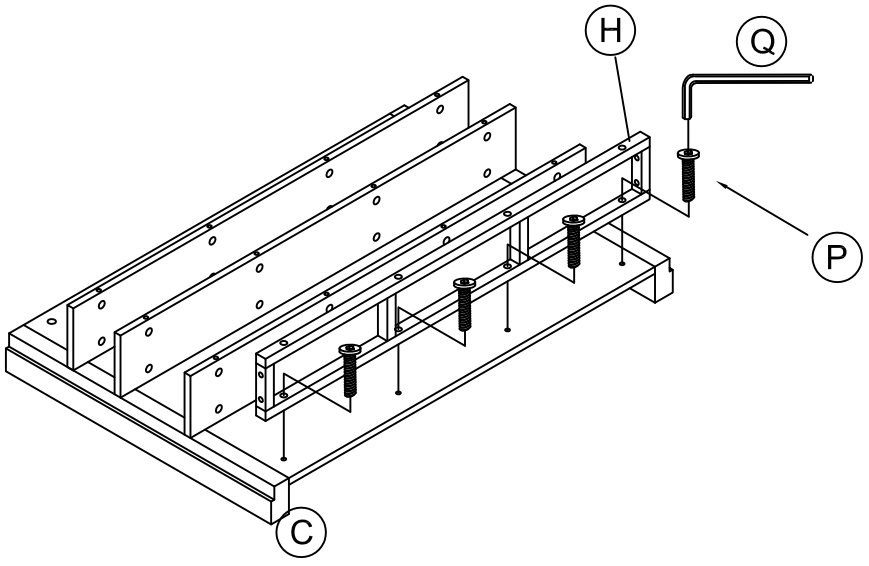

4). ASSEMBLE THE BOTTOM PANEL(H).

- ATTACH THE BOTTOM PANEL(H) TO SIDE PANEL(C) USING 4 SCREWS(P).

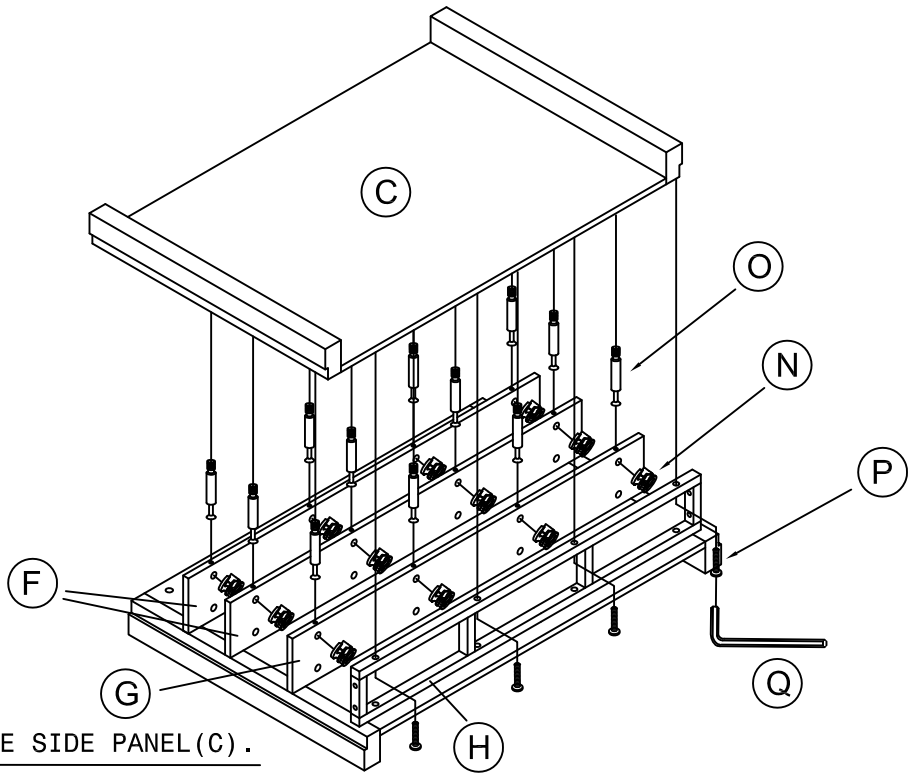

5). ASSEMBLE THE SIDE PANEL(C).

- ROTATE THE 12 CAM-BOLTS(O) INTO THE HOLES IN THE SIDE PANEL(C).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE PANELS(F/G) AND ATTACH USING 12 CAM-LOCKS(N).
- ROTATE THE 4 SCREWS(P) INTO THE HOLES IN THE BOTTOM PANEL(H).

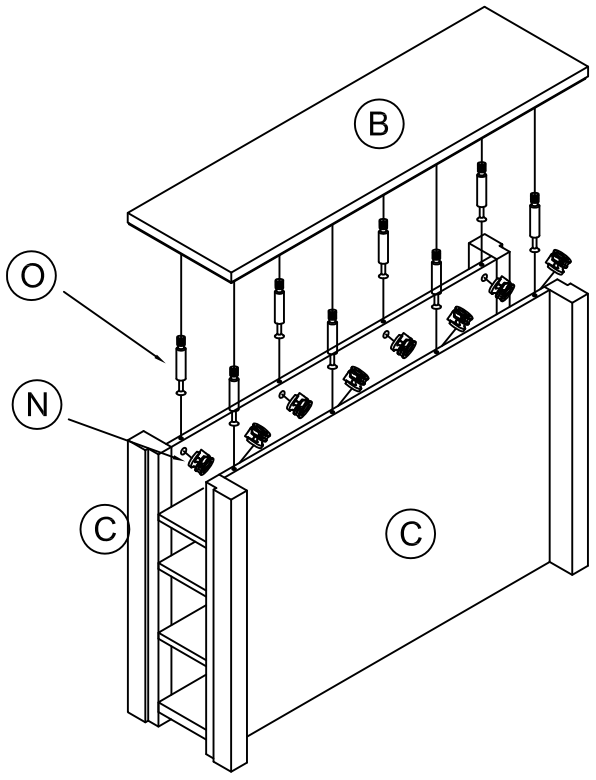

6). ASSEMBLE THE TOP PANEL(B).

- ROTATE THE 8 CAM-BOLTS(O) INTO THE HOLES IN THE TOP PANEL(B).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE SIDE PANELS(C) AND ATTACH USING 8 CAM-LOCKS(N).

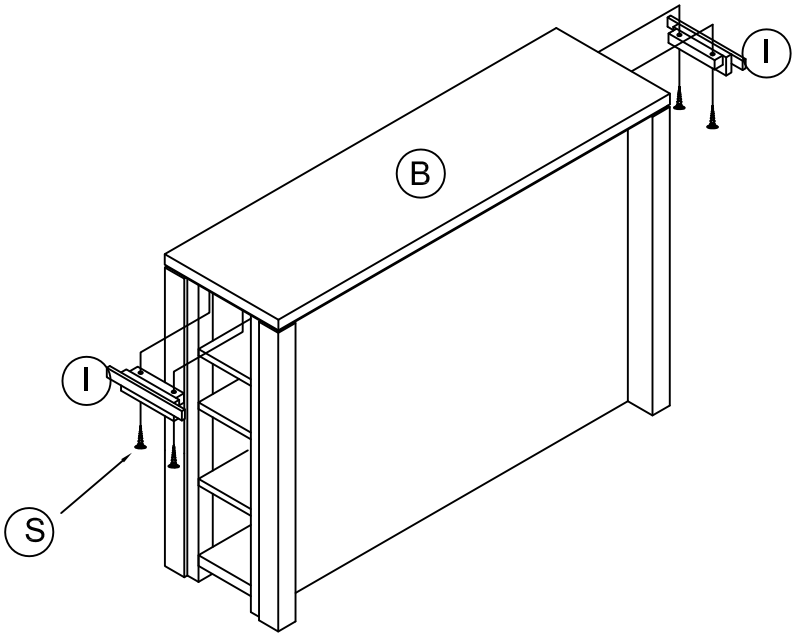

7). ASSEMBLE THE UP PANELS(I).

- ATTACH 2 UP PANELS(I) TO TOP PANEL(B) USING 4 SCREWS(S).

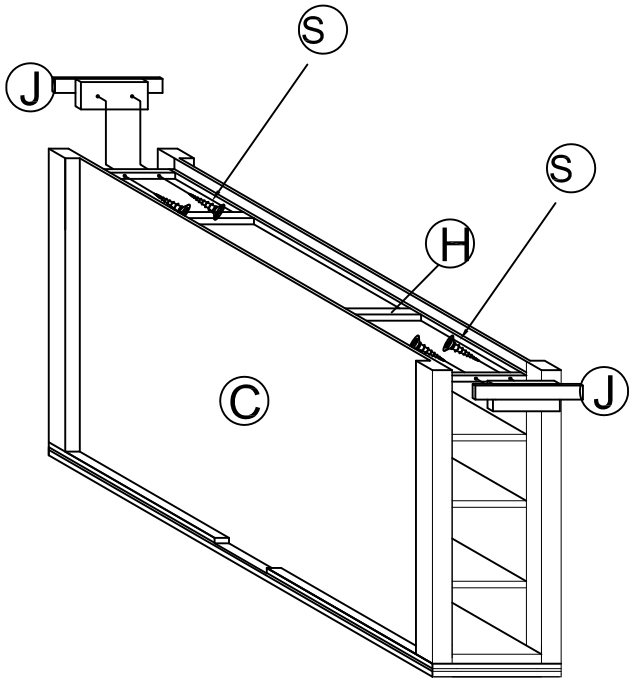

8). ASSEMBLE THE DOWN PANELS(J).

- TURN THE BODY UPSIDE DOWN.
- ATTACH 2 DOWN PANELS(J) TO BOTTOM PANEL(H) USING 4 SCREWS(S).

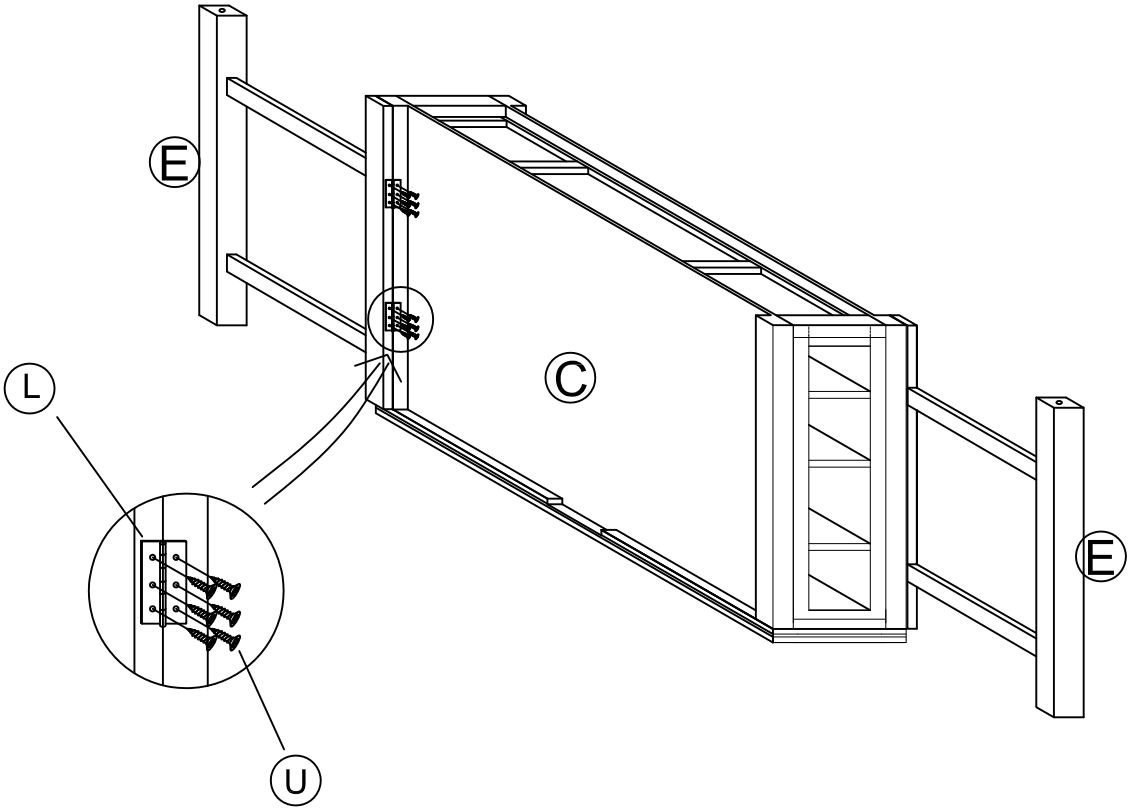

9). ASSEMBLE THE RIGHT FRAMES(E).

- ATTACH THE HINGES(L) TO RIGHT FRAMES(E) AND SIDE PANELS(C) USING SCREWS(U).

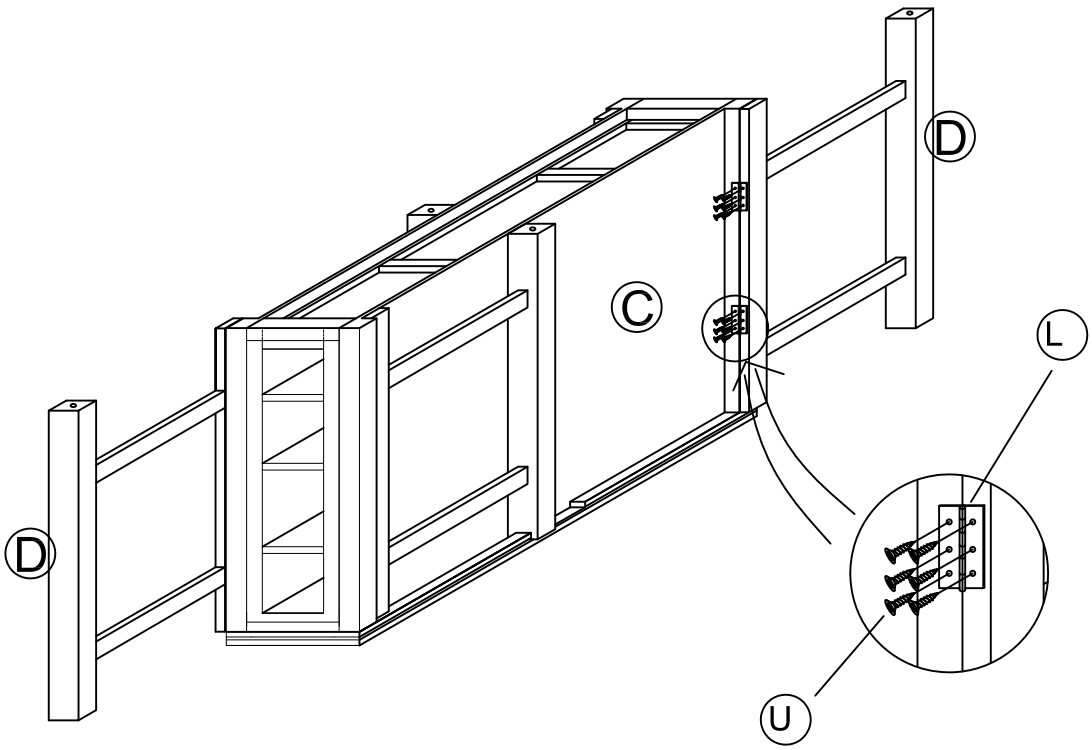

10). ASSEMBLE THE LEFT FRAMES(D).

- ATTACH THE HINGES(L) TO LEFT FRAMES(D) AND SIDE PANEL(C) USING SCREWS(U).

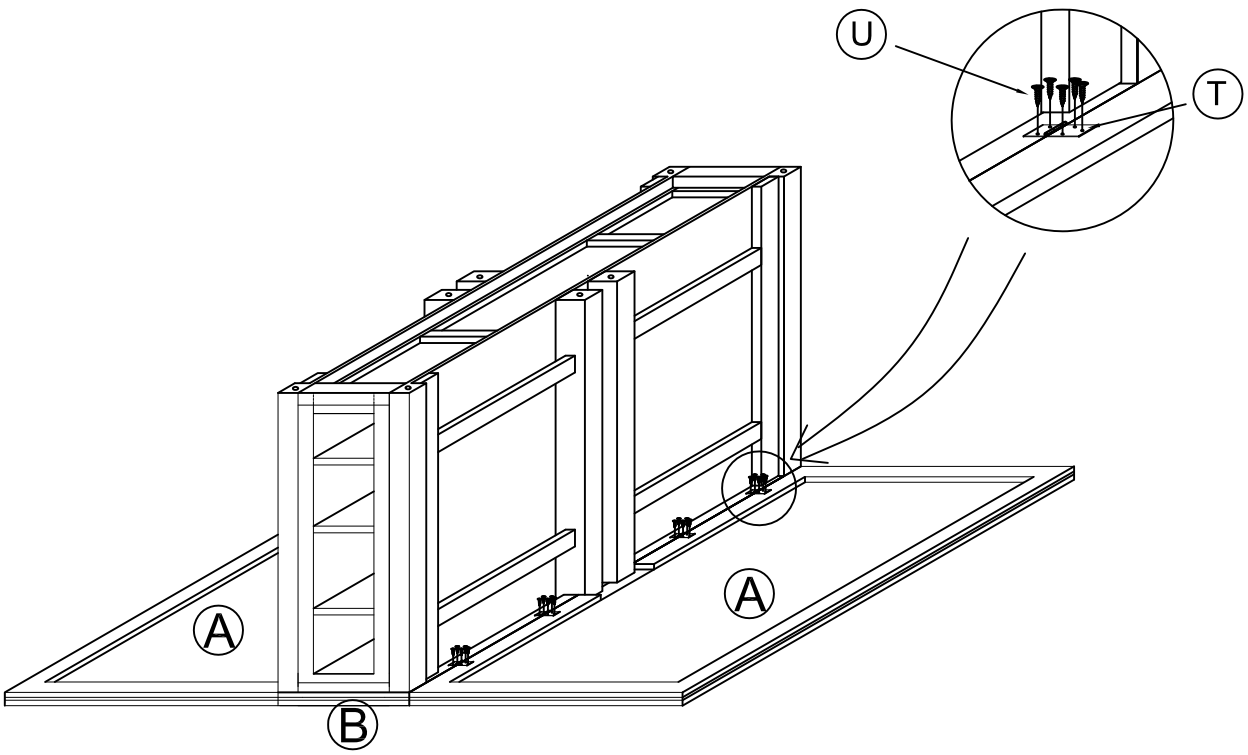

11). ASSEMBLE THE EXTEND PANELS(A).

- ATTACH THE HINGES(T) TO TOP PANEL(B) AND EXTEND PANELS(A) USING SCREWS(U).

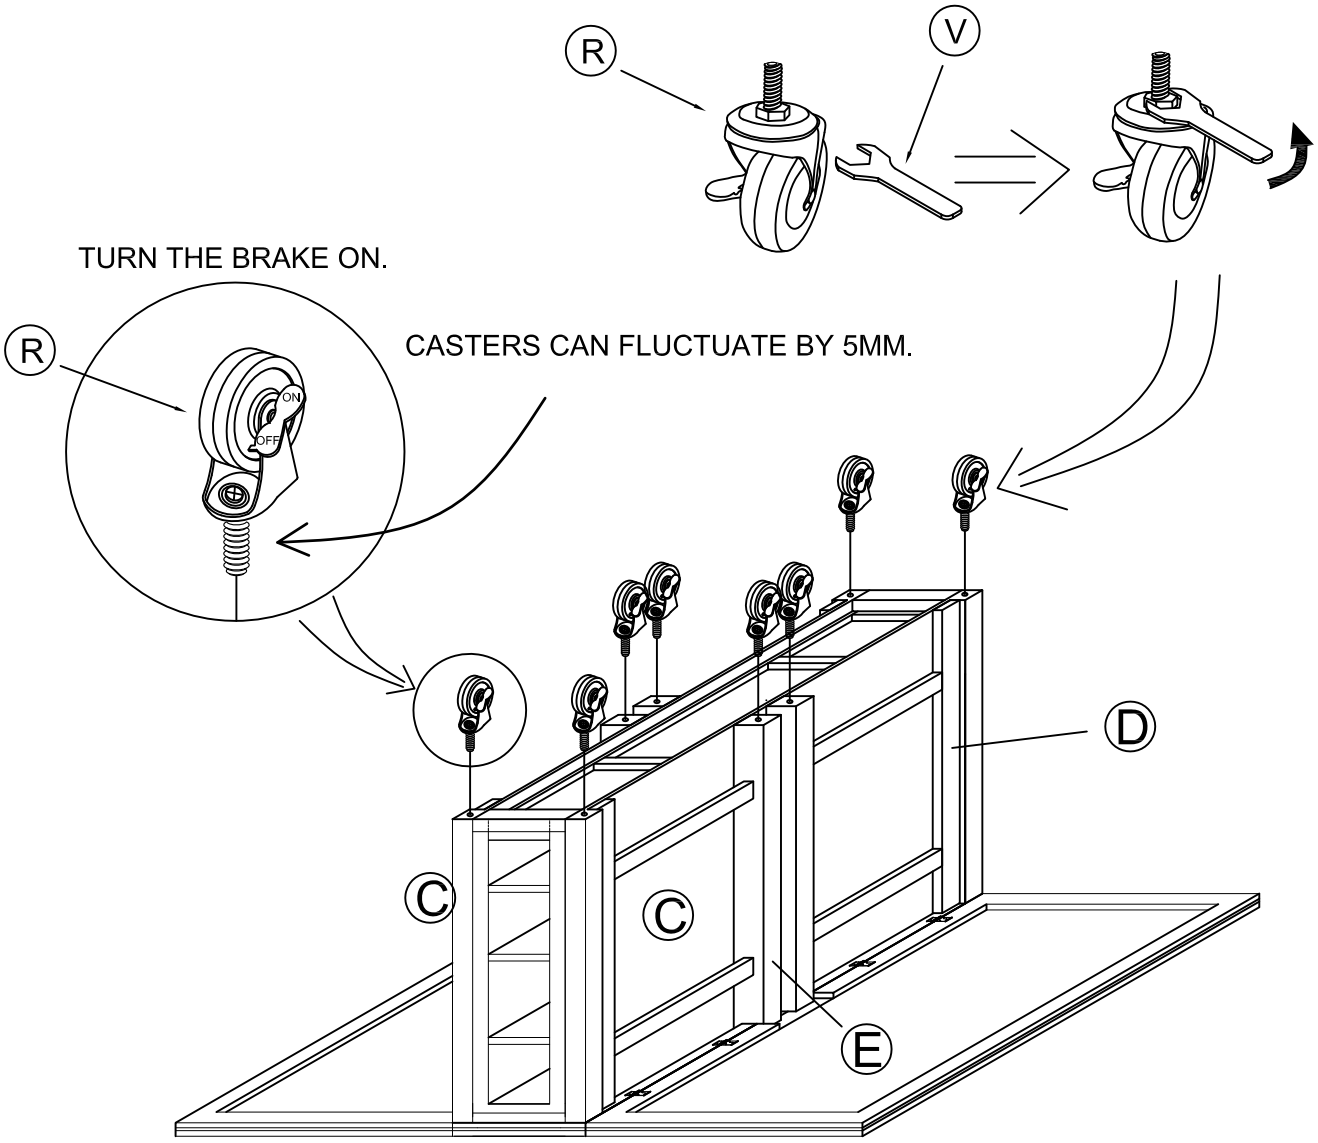

12). ASSEMBLE THE 8 CASTER(R).

- ROTATE THE 8 CASTERS(R) INTO THE HOLES IN THE PANELS(C/E/D) USING SPANNER(V).

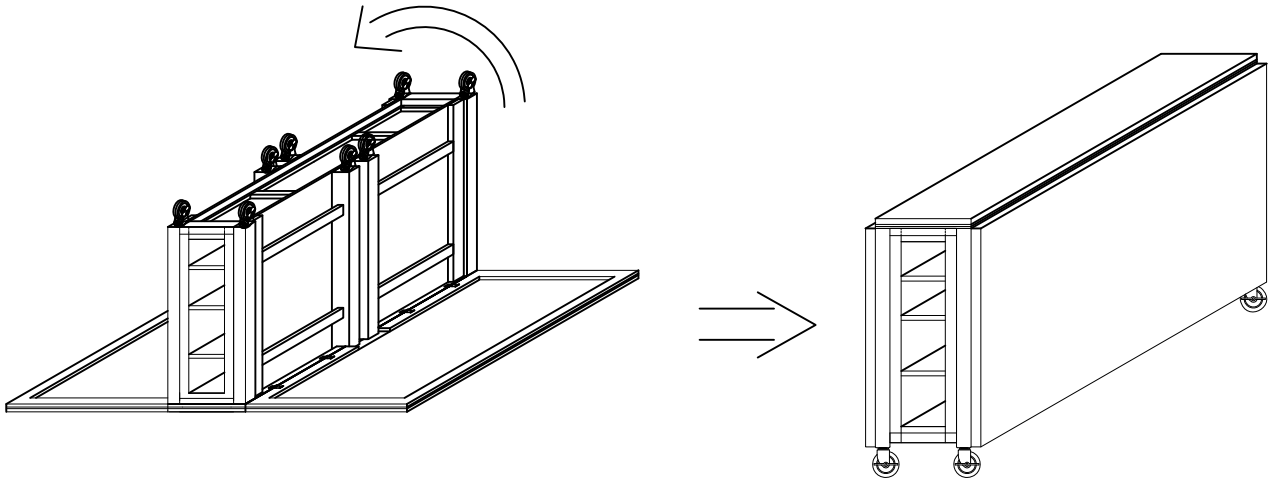

13). TURN THE BODY UPSIDE.

- TURN THE BODY UPSIDE.

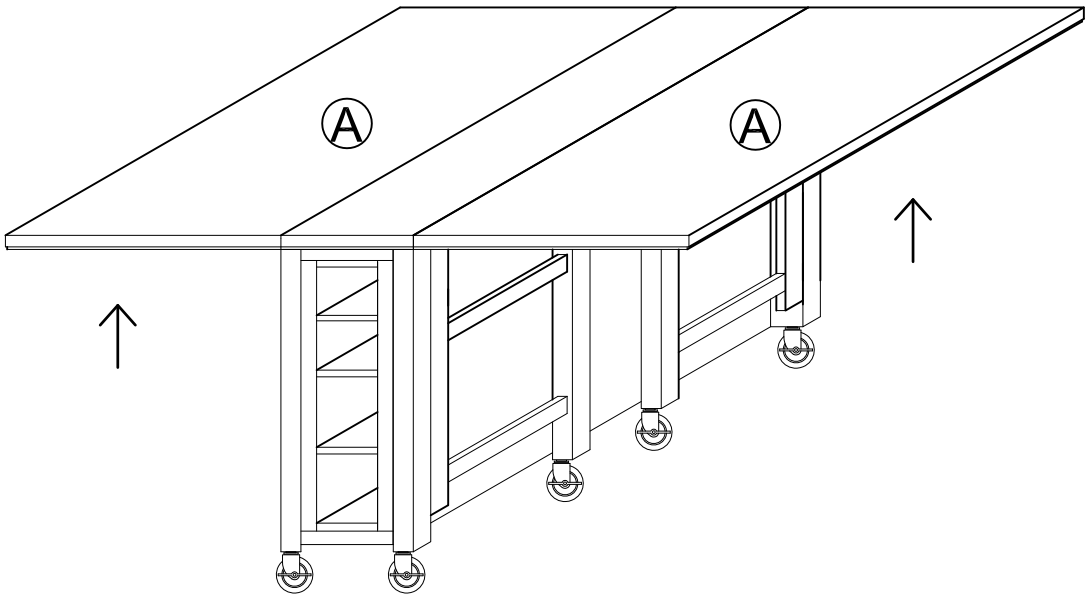

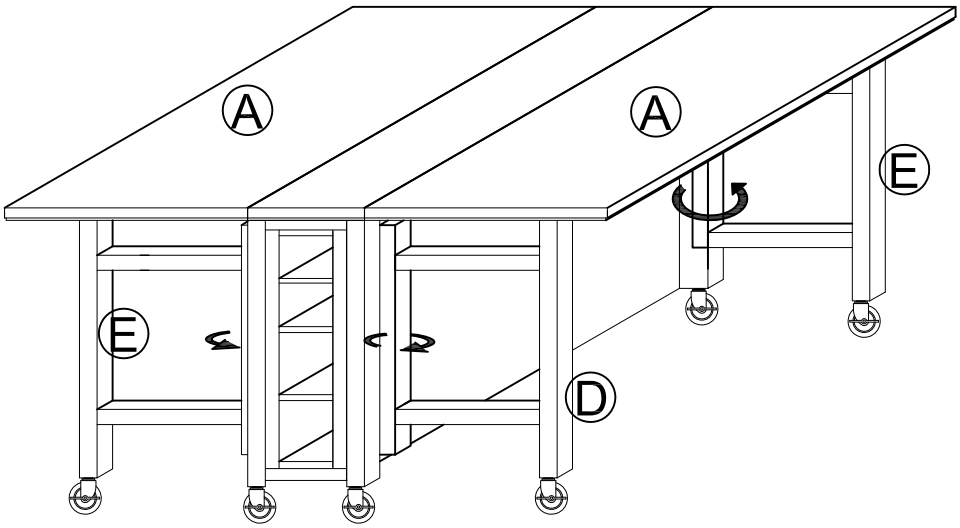

14). ASSEMBLE THE EXTEND PANELS(A).

- SETUP EXTEND PANELS(A), ROTATE LEFT&RIGHT PANELS(E/D) UNTIL YOU HEAR A CLICK SOUND.